LRCM Programmer User's Guide

(Data Output cable and LRCM device)

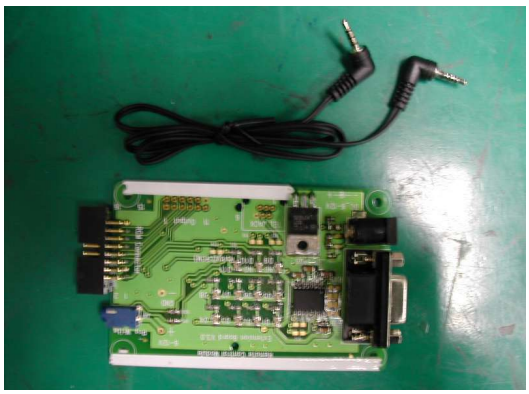

(Programming wire and Extension Board)

Programming wire connector

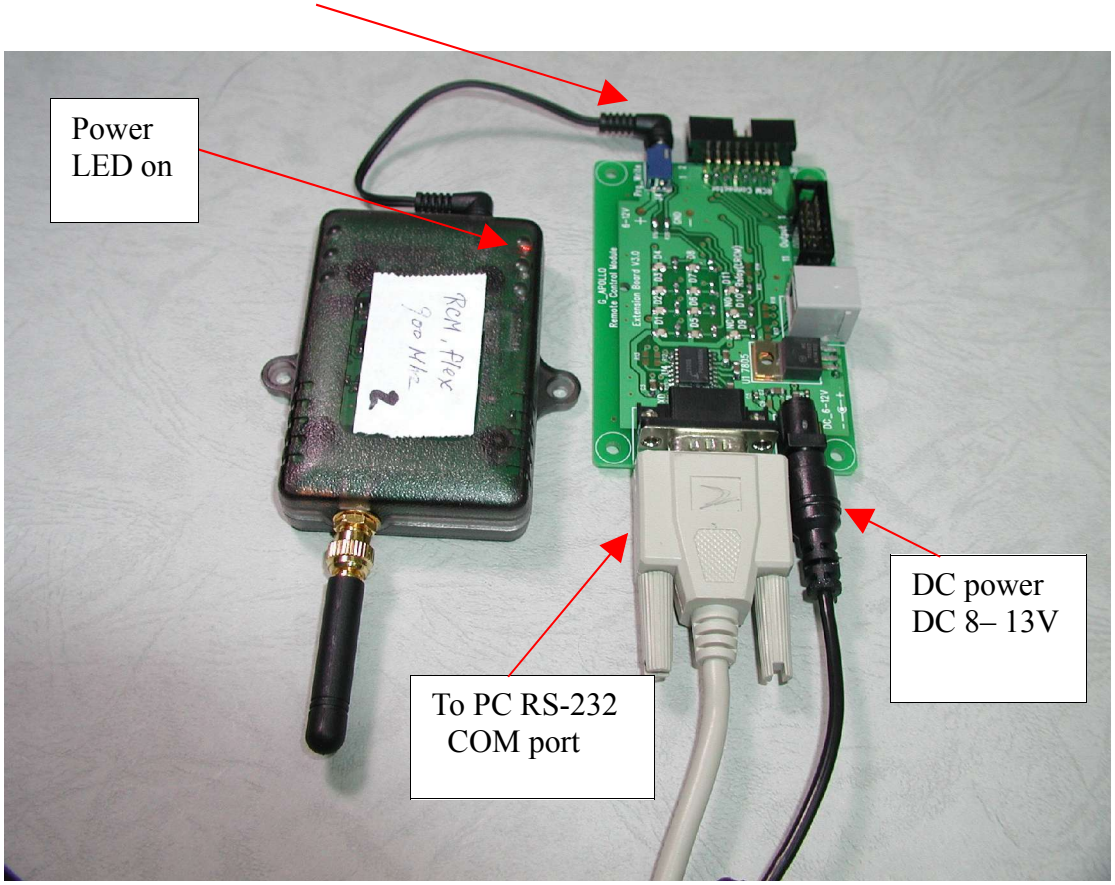

Figure 1 (Programming setup)

1. If you want to program LRCM then only connect the programming wire. And you can do the programming through RS-232 COM port with PC programming software.

Programming procedure :

1.Connect all wires properly as figue 1.

2.Run programming software from PC.

3.Plug off the DC power for 5 seconds and plug in DC power again.
Make sure the LRCM power LED have “turn off” and “turn on” again.

4.Select your parameters as your request .

5.Write data to the Device.

6.If you need to read device parameters then you can use “Read” feature.

Notice : If you have problem in programming read or write feature, please redo Step 3 to Step 6. and the step 3 can make sure LRCM is ready to accept PC command.